Quick Start Guide

SurroundBAR® 360° DVD Theater

1 2 3 4 5 6

1 Connect AM & FM Antennas To Receive AM & FM Stations.

6 Press DVD Console Power Button Located On The Front Of The DVD Console.

Mute Your TV's Speakers

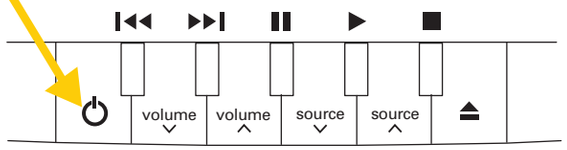

DVD Console Buttons

5 Switch AC Mains To On Position Located On Back Of DVD Console.

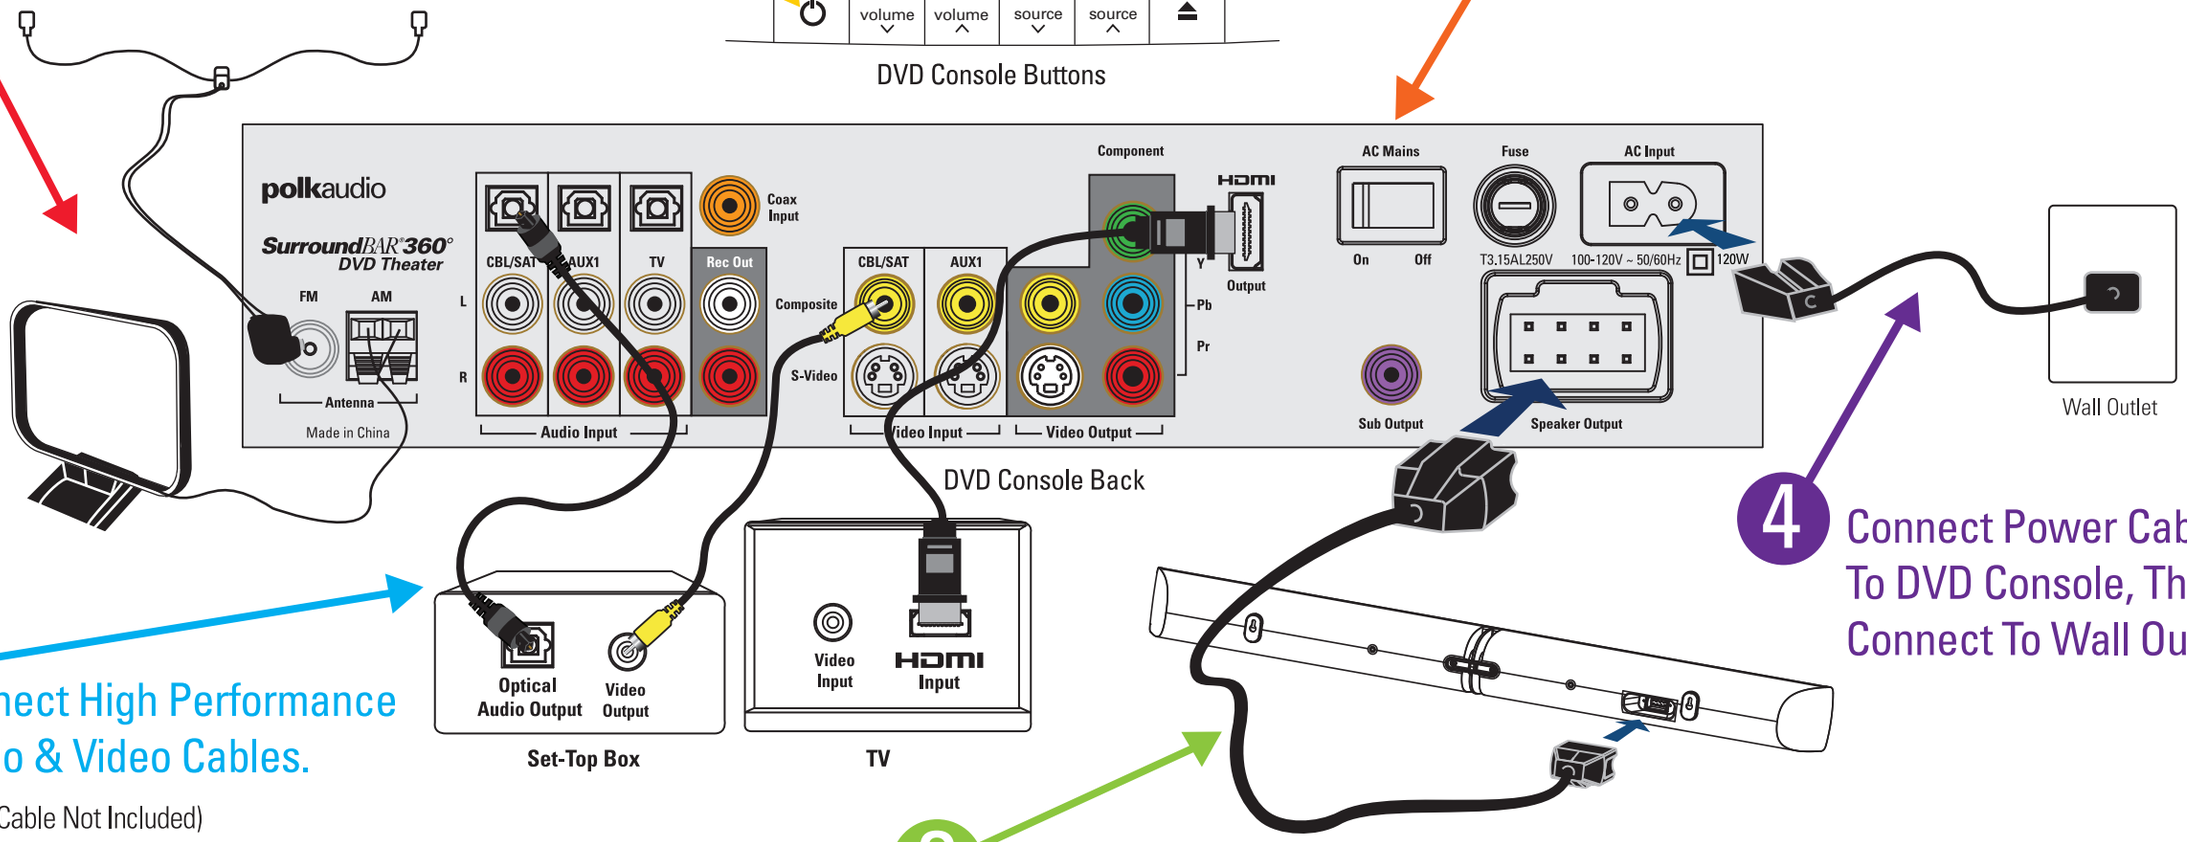

4 Connect Power Cable To DVD Console, Then Connect To Wall Outlet.

2 Connect High Performance Audio & Video Cables.

(HDMI Cable Not Included)

Important Note: We recommend you use the highest quality audio and video connection your TV will support, such as the HDMI and optical audio connections indicated in this guide. The optical audio connection can be made from your Set Top box to the CBL/SAT audio input connection on the DVD Console, or from your TV's optical output to the TV optical audio input on the DVD Console. The HDMI cable is not included with the SurroundBar 360° DVD Theater.

3 Connect SurroundBar360° Speaker To DVD Console.

230V Unit Only: SCART Connection, Fuse Rating and Power Cord Connection

These graphics indicate the SCART connection, fuse rating and power cord connection used in the 230V DVD Console, all of which are located on the back panel.

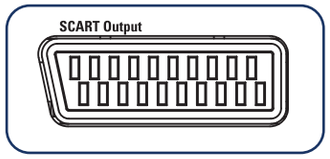

The SCART output (for European model) is located on the back panel of the DVD Console.

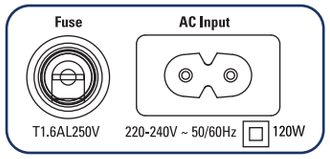

Fuse and Power Ratings for European Model

polkaudio®

For a more comprehensive explanation and a full listing of hookup and setup options, consult your owner's manual.

Polk Audio Customer Service 1-800-377-7655 (M-F, 9-6 ET, USA & Canada only) or via email **polkcs@polkaudio.com**. (Worldwide: 1-410-358-3600). To learn more about the Polk Audio SurroundBar360° DVD Theater and other Polk Audio products, go to www.polkaudio.com.

HBP1642-H